


SIRIUS modular system. The perfect combination

Switching, protecting, starting and monitoring with the highly flexible modular system

Everything for the control cabinet: the SIRIUS modular system.

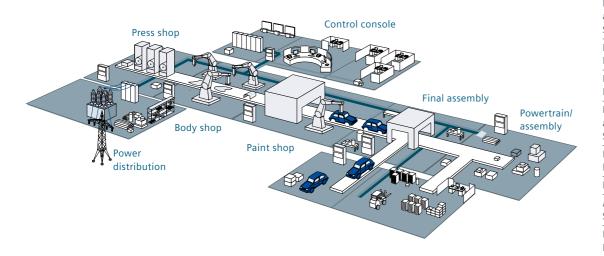

Processing, fitting, transporting. These and similar functions run on many automated production lines. With the extensive range of the SIRIUS modular system, you will find everything you need for switching, protecting, starting and monitoring motors.


Everything. Really easy. With SIRIUS.

Contents

The components of the SIRIUS modular system Combination of switching devices and protective devices Convenient means of power supply and distribution	4 8 9
Electromechanical switching devices for fuseless assembly of load feeders up to 7.5 kW Size S00 selection and ordering data:	10
Motor starter protector, contactor with overload relay Motor starter protector, contactor with current monitoring relay	10 10
Motor starter protector, soft starter with current monitoring relay Motor starter protector, semiconductor contactor with current monitoring relay	13 13
Electromechanical switching devices for fuseless assembly of load feeders up to 18.5 kW Size S0 selection and ordering data:	16
Motor starter protector, contactor, overload relay Motor starter protector, contactor with current monitoring relay	17 17
Motor starter protector, soft starter with current monitoring relay	18
Assembly of direct-on-line starters and reversing starters 37 kW Size S2 selection and ordering data:	21
Motor starter protector, contactor, overload relay Motor starter protector, contactor with current monitoring relay	21 21
Assembly of direct-on-line starters and reversing starters up to 55 kW Size S3 selection and ordering data	27
Size S6, S10 and S12 Selection and ordering data	31
Fuseless load feeders Selection and ordering data:	
Direct-on-line starters	34
(fully pre-assembled load feeders, compact starters) Reversing starters (fully pre-assembled load feeders, compact starters)	35
Communication connection (IO-Link/AS-Interface master, contactors, function modules for mounting on 3RT2 contactors and for connecting to the automation level, compact starters)	36
Infeed systems For compact starters, load feeders, 3-phase busbar, 8US busbar adapter	39
Accessories Selection and ordering data:	
Motor starter protectors Contactors Overload relays, current monitoring relays	42 43 48

Everything. Systematically. SIRIUS modular system.

Building control cabinets must be fast, simple, flexible and space-saving. How can all this be achieved? With the unique SIRIUS modular system that offers everything you will need for switching, protecting, and starting motors and systems. In other words, it provides a modular range of standard components up to 250 kW/ 400 V in only seven sizes, which are perfectly matched to one another, can be combined really easily, and largely use the same accessories. That's how easy industrial controls can be!

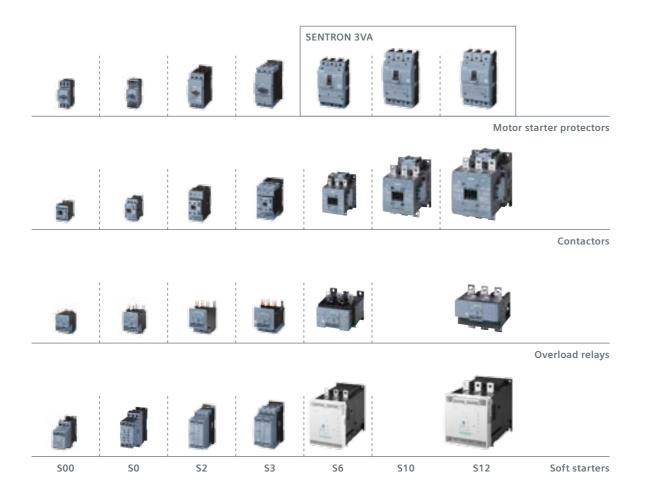

Continuous further development and regular innovations ensure that our customers are optimally equipped with SIRIUS and benefit from efficient solutions – now and in the future. All the components that make up the SIRIUS modular system are characterized by a space-saving design and a high degree of flexibility. Configuring, installing, wiring and maintenance are extremely easy and time-saving to perform. So no matter whether you want to configure load feeders with motor starter protectors, overload relays, contactors/solid-state contactors or soft starters, SIRIUS has just the product you will need for any application.

Thanks to the latest innovations to the modular system in sizes S00, S0, S2 and S3 up to 115 A, today's SIRIUS modular system offers even more functional diversity.

In addition to the basic components, the innovated SIRIUS modular system offers new, never-before-seen highlights:

- Feeder assemblies that can be plugged in completely without tools thanks to the consistent use of spring-loaded connections in sizes S00 and S0
- 2- and 3-phase 3RR2 monitoring relays for current monitoring for direct mounting on contactors (up to size S2)
- 3RA27 and 3RA28 function modules feature snap-on connection to contactors enabling the easiest possible assembly of direct-on-line starters, reversing starters, and star-delta (wye-delta) starting, and connection to the controller using less wiring via AS-Interface or IO-Link
- 3RB24 overload relay with communication capability, current value transmission, and control of the contactors via IO-Link
- One highlight of the SIRIUS devices is their IE3 and IE4 suitability, so that they are optimally equipped for conversion to the new IE3 and IE4 generation of motors

3

At a glance. The components of the SIRIUS modular system offer a host of benefits.

With its wide range of components, the SIRIUS modular system features the most diverse functions for use in the control cabinet, and offers a host of benefits in assembly and handling, in application monitoring, and also in controller interfacing, or when planning and configuring.



Assembly and handling:

Error prevention and reduced wiring effort – with maximum flexibility

- Load feeders: easy to implement up to 250 kW/400 V from standard devices
- Modular design: everything fits together and can be combined
- Variants and sizes: economical and flexible thanks to 7 compact sizes
- Accessories: low variance with uniform accessories
- Configuration: fast commissioning, short setting-up times, and simple wiring
- Mounting: permanently secure mounting, with screw terminals or simply by plugging in
- **Spring-loaded connection system:** quick and secure connection, vibration-proof, and maintenance-free
- Reduced wiring: significant reductions in cable connections thanks to plug-in design and IO-Link or AS-Interface

Applications at a glance:

Increased operational reliability and system availability

- Maintenance: extremely durable, low maintenance, and reliable
- Application monitoring: integrated extremely flexibly into the feeder – thanks to monitoring relays for current monitoring
- IE3/IE4-ready: With the SIRIUS modular system, we also offer you our familiar reliability when converting to IE3 and IE4 motors

Connection to the automation level:

Optimal integration into the automation environment

 Communication: standardized connection to AS-Interface, IO-Link and PROFIBUS DP possible

Planning and configuration:

Simplified system planning and documentation

- **Configuration:** easy and fast thanks to extensive CAx data provision
- Service: short delivery times even for spare parts thanks to global logistics network
- Environment: environmentally friendly production and materials, recyclable
- **Design:** clear, ergonomic design (winner of the iF Product Design Award)
- Configurator: for the simplest possible selection of products including accessories
- Global use: thanks to comprehensive approvals

Switching. Protecting. Starting. Monitoring. The components of the SIRIUS modular system.



Much more than ON/OFF: SIRIUS 3RV motor starter protectors

The SIRIUS 3RV motor starter protectors are compact, current-limiting motor starter protectors. They ensure secure disconnection in case of a short circuit, and they protect consumers and the system against overload. They are also suited to normal switching duties for loads with a low switching frequency, and for safely isolating the system from the power supply during maintenance work or modifications. For applications over 100 A. SENTRON 3VA and 3VL circuit breakers are suitable.



Rugged and reliable: SIRIUS 3RT contactors

Thanks to their extreme ruggedness and outstanding contact reliability, our contactors switch supremely and reliably. In addition, they enable compact control cabinets with high packing density. With integrated ranges of accessories for sizes S00 to S3 as well as S6 to S12, individual function expansions can be implemented with no great effort. In sizes S00 to S3, the contactors even have the auxiliary switches

integrated into the enclosure.



Tripping when things get serious: SIRIUS 3RU and 3RB overload relays

The overload relays of the SIRIUS family are available in thermal and electronic versions, and they are responsible for the inversetime-delayed overload protection in the main circuit. The SIRIUS 3RB electronic overload relays ensure seamless protection for motors and systems from 0.1 A to 630 A. This current range can be covered with a minimum number of variants thanks to the large setting range.



Simplest possible application monitoring: SIRIUS 3RR2 current monitoring relays

The SIRIUS current monitoring relays monitor not so much the motor as the entire plant or driven process for overcurrent and undercurrent, wire break, or phase failure. Thus, load shedding or overload of an application, for example, is detected quickly and reported early. The 3RR2 monitoring relay for current monitoring is integrated directly into the load feeder in sizes SOO, SO and S2. Just attach it to the contactor, and click 'n' go.



Soft starting: SIRIUS 3RW soft starters

SIRIUS 3RW soft starters offer a complete range that covers all standard and high-feature applications of motor starting. Thus the benefits of soft starting can be reaped in the most diverse applications up to 250 kW (at 400 V) for simple and economical implementation of optimum machine concepts. Economical and space-saving soft starting can be implemented up to 55 kW (at 400 V) with the compact 3RW30 with two-phase control. The 3RW40 also offers soft run-down as well as integrated intrinsic device protection functions and motor protection functions. An additional overload relay can therefore be dispensed with. SIRIUS soft starters are available for line voltages up to 600 V – optionally also with thermistor motor protection evaluation.

Switching. Protecting. Starting. Monitoring. The components of the SIRIUS modular system.



Master the highest switching frequencies with confidence: SIRIUS 3RF solid-state contactors

SIRIUS solid-state contactors (size S0) for switching motors impress with their almost limitless service life – even under harsh conditions and at high switching frequencies. The three-phase solid-state contactors switch motors completely silently up to 7.5 kW.

A special reversing contactor version enables changing of the direction of rotation of motors up to 3 kW. The compact devices in widths of 45 or 90 mm can be combined with our motor starter protectors, current monitoring relays, or electronic overload relays. For fast and simple assembly of fuseless and fused motor feeders.



Compact switching and protecting: SIRIUS 3RA6 compact starters and 3RM1 motor starters

Equipped with the functions of a motor starter protector, a contactor, and an electronic overload relay, the 3RA6 compact starter as a direct-on-line or reversing starter up to 32 A offers maximum reliability with minimum variance. There is reduced wiring in the main circuit thanks to the ingeniously simple infeed system, including PE connection. Thanks to the optional AS-Interface or integrated IO-Link interface, 3RA6 compact starters are integrated into the Totally Integrated Automation design concept.

The 3RM1 direct-on-line or reversing starters up to 7 A reduce width even further to one half the previous size, and are thus master space-savers. Fail-safe design versions offer the greatest possible economizing on switching device deployment in safety-related applications.

SIRIUS contactor with spring-loaded terminals



Faster wiring thanks to integrated spring-loaded terminals

All products with 45-mm widths (S00and S0-size series) in the main as well as auxiliary and control circuits are available with spring-loaded terminals in addition to the conventional screw terminals. This accelerates device connection, and offers maximum operational safety and reliability. The extremely simple wiring quarantees fast installation. Another advantage is that the gas-tight terminal connection is resistant to shaking and vibration. In addition, you benefit from maximum contact reliability - even under the harshest of conditions. There's no need to subsequently re-tighten the connection terminals (often the usual practice). One particular advantage is that the link modules for direct-on-line, reversing and star-delta (wye-delta) starting are also available with spring-loaded terminals. This enables you to install entire feeders entirely without tools. Spring-loaded terminals in the auxiliary circuit are optionally available in sizes S2 and S3.

SIRIUS contactor with screw terminals



Maximum flexibility when it comes to connections

All the components of the SIRIUS modular system are, of course, also available with screw terminals for special requirements such as mechanical engineering in the semiconductor industry. In sizes with design widths of 70 mm and larger (i.e. as of size S3), additional possible connection options are available such as for connecting cable terminal lugs to device connection bars, or connecting cables with large cross sections to box terminals.

Switching. Protecting. Starting. Monitoring. The components of the SIRIUS modular system.



Straight to the point: the 3RA21 direct-on-line starter



Phases swapped: the 3RA22 reversing starter



Two stages – one start: the 3RA24 contactor assembly for star-delta start

Ready for immediate use: pre-wired SIRIUS load feeders

Load feeders start loads with a combination of protection and switching functions. To reduce time and costs, and above all to minimize standstill times, we offer you a wide range of pre-wired starter solutions:

- Direct-on-line starters up to 30 kW and reversing starters up to 15 kW – the right starter combination for all motors – both for standard rail mounting and with 60 mm standard mounting rail adapters.
- Reversing contactor assemblies up to 55 kW – the appropriate combination for reversing duty – for fast rotation direction changes of motors
- Contactor assemblies for star-delta starting up to 90 kW – the solution for starting in stages for reducing start-up current peaks of motors.
- Soft starters when soft starting and stopping are required (in the case of the 3RW40 even with integral overload protection).

An almost unlimited number of further tested combinations can be assembled easily from the individual components. The following manuals help you to make your selection, and they can be found in the Industry Online Support Portal at http://support.automation.siemens.com.

SIRIUS modular system


Configuration Manual "Configuring the SIRIUS Modular System – Selection Data for Fuseless and Fused Load Feeders"

Configuration instructions for IE3 and IE4 motors

Application manual for SIRIUS switching devices with IE3 and IE4 motors

Combination of switching devices and protective devices

Electromechanical switching devices	Contactor and overload relay with fuse	Motor starter protector for motor protection and contactor	Motor starter protector for motor protection with relay function and contactor	Motor starter protector for starter protection, contactor and overload relay	Compact starter	Motor starter protector for motor protection, contactor and current monitor- ing relay	Motor starter protector for motor protection with relay function, contactor and current monitoring relay
Short circuit Overload		*	*		*	<u>*</u>	
Switching Monitoring			+				1-10A
	M	M	M	M	M	M	M

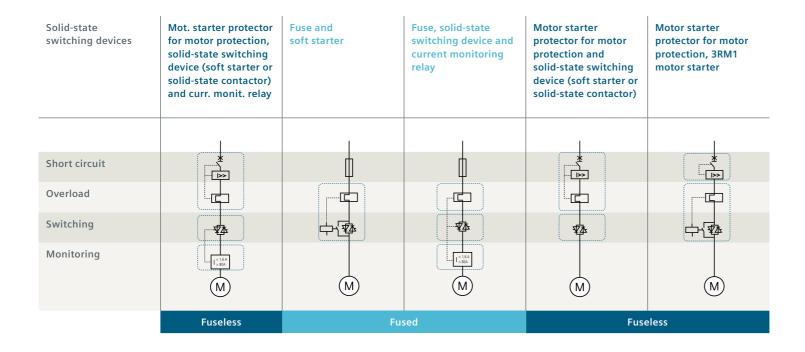

Convenient power infeed and distribution: SIRIUS 3RV29 and 3RA68 infeed systems.







Efficient and flexible power distribution

The components of the SIRIUS modular system can be wired extremely flexibly. For sizes S00 and S0, the simplest method is to connect the components via the associated SIRIUS 3RV29 infeed system in each case. Alongside this, the 3RA68 infeed system is available in conjunction with the 3RA6 compact starter – and both connection methods are available optionally for devices with screw and spring-loaded terminals. Individual motor starter protectors, complete load feeders, and compact starters are just clicked into the infeed systems. An entire feeder group is thus supplied with energy without any time-consuming wiring and with no risk of error – just click and go! Alternatively, you can also use conventional wiring: by means of parallel wiring, 3-phase busbars or 8US busbar adapters

with which SIRIUS load feeders can be mounted directly on a 60 mm busbar system.

These diverse combination options provide you with the most effortless solution to implement your individual control cabinets – simply perfectly tailored to your application.

Assembly – Highlights

- Consistent use throughout by combining 3RV29 and 3RA68 modules
- New flexibility for installation and expansion
- More free space in the control cabinet thanks to extremely compact design
- Infeed (3RA68) either on the left or right with conductor cross section up to 70 mm²
- Optional wiring channel between the feeders
- Additional integration of further 1-, 2- or 3-pole components via terminal block
- Maximum current carrying capacity of 100 A (3RA68)
- Integration of load feeders with screw and spring-loaded terminals
- High vibration resistance, especially for switching devices with spring-loaded terminals
- Time savings during installation thanks to simple plug-in design
- For 3RA68 infeed system also with PE connection option


Assembly up to 7.5 kW (S00)

Motor starter protector for starter protection, contactor with overload relay

Motor starter protector for motor protection, contactor with current monitoring relay




	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV23111	3RV23112-
2	Link module	3RA1921-1DA00	3RA2911-2AA00
3	Contactor (AC/DC)	3RT201 -1 -1	3RT201 -2 -2
4	Overload relay	3RU2116- □ B0 or	3RU2116-□□C0
		3RB3□1□-□□B0	3RB3016-—E0

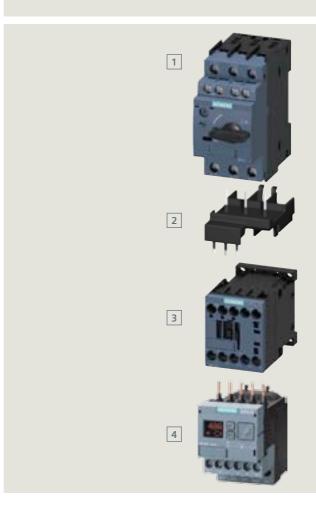


	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV20111	3RV20112
2	Link module	3RA1921-1DA00	3RA2911-2AA00
3	Contactor (AC/DC)	3RT201 -1 -1	3RT201 -2 -
4	Current monitoring relay	3RR2_41-1	3RR2 41-2 1


Starter combinations in size S00: motor starter protector for starter protection, contactor and overload relay



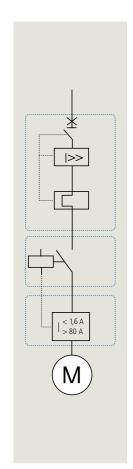


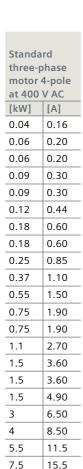



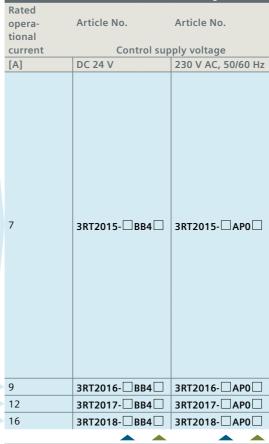

Contactors (aux. contacts 1NO or 1NC integrated)

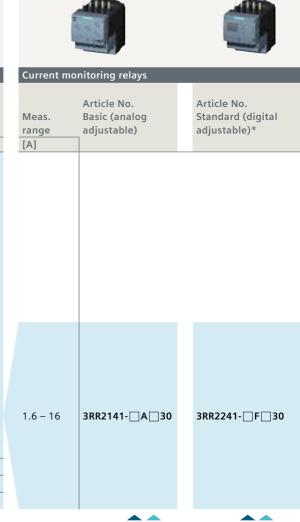

Screw terminals: 1 Spring-loaded terminals: 2 Screw terminals: 1 1NO: 1 Spring-loaded terminals: 2 1NC: 2

Screw terminals: ①
Spring-loaded terminals: ②
24 V AC/DC: △
24 – 240 V AC/DC: W

Screw terminals: 1 Spring-loaded terminals: 2 24 V AC/DC: A 24 – 240 V AC/DC: W

*likewise available as 3RR24 with IO-Link

Fuseless assembly with solid-state switching devices

Assembly up to 7.5 kW (S00)

Motor starter protector for motor protection, soft starter with current monitoring relay (stand-alone installation)

Motor starter protector for motor protection, solid-state contactor with current monitoring relay (stand-alone installation)



The terminal support for standalone assembly is needed to use a 3RR2 current monitoring relay on a 3RW30/40 soft starter. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active. For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start. For 3RW40: Activate and deactivate the 3RR2 monitoring relay via the BYPASS output (ramp-up detection).


1		
2		
3		
4		
5	The state of the s	1) The terminal support for stand- alone assembly is needed to use a size-S00 3RR2*41 current monitoring relay with a semiconductor contact.

	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV201111	3RV2011
2	Link module	3RA2921-1BA00	3RA2911-2GA00
3	Soft starter	3RW301 -1 -1	3RW301\[\bigcup2\[\bigcup1
4	Terminal support stand-alone	3RU2916-3AA01	3RU2916-3AC01
5	Current monitoring relay ¹⁾	3RR2_41-1	3RR2 41-2 1


5


	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV20111_	
2	Link module	3RA2921-1BA00	
3	Solid-state cont./solid-state rev. cont.	3RF341	
4	Terminal support stand-alone	3RU2916-3AA01	3RU2916-3AC01
5	Current monitoring relay ¹⁾	3RR21	3RR2\(\text{41-2}\)

Starter combinations: Motor starter protector for motor protection, soft starter with current monitoring relay

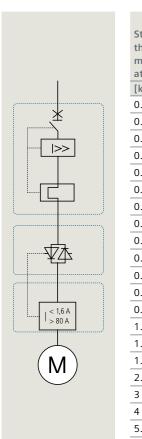

		100	
		Motor starter prot	ectors
Standa three-I motor	ohase	Setting range for thermal overload release	
at 400	1	CLASS 10	Article No.
[kW]	[A]	[A]	
0.04	0.16	0.11 – 0.16	3RV2011-0AA_0
0.06	0.20	0.14 – 0.2	3RV2011-0BA□0
0.06	0.20	0.18 – 0.25	3RV2011-0CA□0
0.09	0.30	0.22 - 0.32	3RV2011-0DA□0
0.09	0.30	0.28 - 0.4	3RV2011-0EA□0
0.12	0.44	0.35 – 0.5	3RV2011-0FA □0
0.18	0.60	0.45 - 0.63	3RV2011-0GA□0
0.18	0.60	0.55 – 0.8	3RV2011-0HA□0
0.25	0.85	0.7 – 1	3RV2011-0JA □0
0.37	1.10	0.9 – 1.25	3RV2011-0KA□0
0.55	1.50	1.1 – 1.6	3RV2011-1AA□0
0.75	1.90	1.4 – 2	3RV2011-1BA□0
0.75	1.90	1.8 – 2.5	3RV2011-1CA□0
1.1	2.70	2.2 – 3.2	3RV2011-1DA□0
1.5	3.60	2.8 – 4	3RV2011-1EA□0
1.5	3.60	3.5 – 5	3RV2011-1FA □0
2.2	4.90	4.5 – 6.3	3RV2011-1GA□0
3	6.50	5.5 – 8	3RV2011-1HA□0
4	8.50	7 – 10	3RV2011-1JA □0
5.5	11.5	9 – 12.5	3RV2011-1KA□0
7.5	15.5	10 – 16	3RV2011-4AA 0

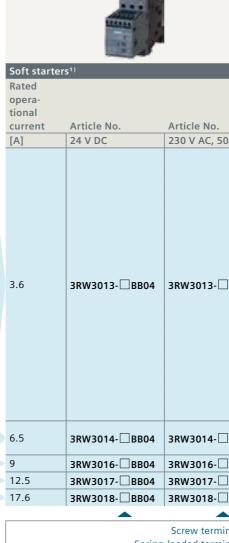

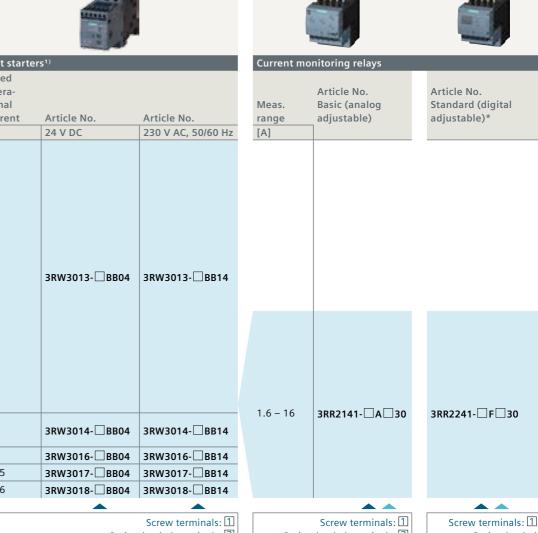

Screw terminals: 1 Spring-loaded terminals: 2


Spring-loaded terminals: 2 Spring-loaded terminals: 2 24 V AC/DC: A 24 – 240 V AC/DC: W

Spring-loaded terminals: 2 24 V AC/DC: A 24 – 240 V AC/DC: W

¹⁾ Rated operational voltage 200 - 480 V

^{*}likewise available as 3RR24 with IO-Link

Starter combinations: motor starter protector for motor protection, solid-state switching device and current monitoring relay

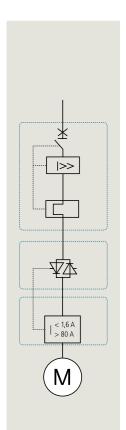

1) Width 90 mm

3RF3900-0QA88

2) Rated operational voltage Ue 48 - 480 V

3) Can be mounted directly on solid-state contactor

with screw terminals using connection adapter

Standard three-phase motor 4-pole at 400 V AC		
[kW]	[A]	
0.04	0.16	
0.06	0.20	
0.06	0.20	
0.09	0.30	
0.09	0.30	
0.12	0.44	
0.18	0.60	
0.18	0.60	
0.25	0.85	
0.37	1.10	
0.55	1.50	
0.75	1.90	
0.75	1.90	
1.1	2.70	
1.5	3.60	
1.5	3.60	
2.2	4.90	
3	6.50	
4	8.50	
5.5	11.5	

7.5

15.5









Antal		-
Solid-state o	contactors ²⁾	
Rated		
opera-	Article No.	Article No.
tional		
current		ply voltage
[A]	24 V DC	110 – 230 V AC, 50/60 Hz
5.2	3RF3405-□BB04	3RF3405-□BB24
9.2	3RF3410-□BB04¹)	3RF3410-□BB24 ¹⁾
12.5	3RF3412-□BB04¹)	3RF3412-□BB24 ¹⁾
16	3RF3416- BB04 ¹⁾	3RF3416- BB241)





No. d (digital ple)*
C

1.6 – 16	3RR2141-□A□30³)	3RR2241-□F□30³)

*likewise available as 3RR24 with IO-Link

Screw terminals: 1

24 – 240 V AC/DC: W

24 V AC/DC: A

Spring-loaded terminals: 2

Solid-state reversing contactors 2)			
3.8	3RF3403-1BD04	3RF3403-1BD24	
5.4	3RF3405-1BD04	3RF3405-1BD24	
7.4	3RF3410-1BD041)	3RF3410-1BD24 ¹⁾	

Screw terminals: 1

Spring-loaded terminals: 2

Assembly 18.5 kW (S0)

Motor starter protector for starter protection, contactor and overload relay

1

2



3



4



1) Can only be used up to 32 A

	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV23211	3RV2321
2	Link module ¹⁾	AC 3RA2921-1AA00 DC 3RA2921-1BA00	3RA2921-2AA00 3RA2921-2AA00
3	Contactor	3RT202 -1 T	3RT202 -2 -
4	Overload relay	3RU2126- B0 or	3RU2126-□□C0 or 3RB3□2□-□□E0

Motor starter protector for motor protection, contactor with current monitoring relay
















1) Can only be used up to 32 A

	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV2021-11111	3RV2021
2	Link module ¹⁾	AC 3RA2921-1AA00 DC 3RA2921-1BA00	3RA2921-2AA00 3RA2921-2AA00
3	Contactor	3RT202□-1□□□□	3RT202 - 2 - 2
4	Current monitoring relay	3RR2 42-1	3RR2 42-2 1

Starter combinations size S0: Motor starter protector for starter protection, contactor and overload relay

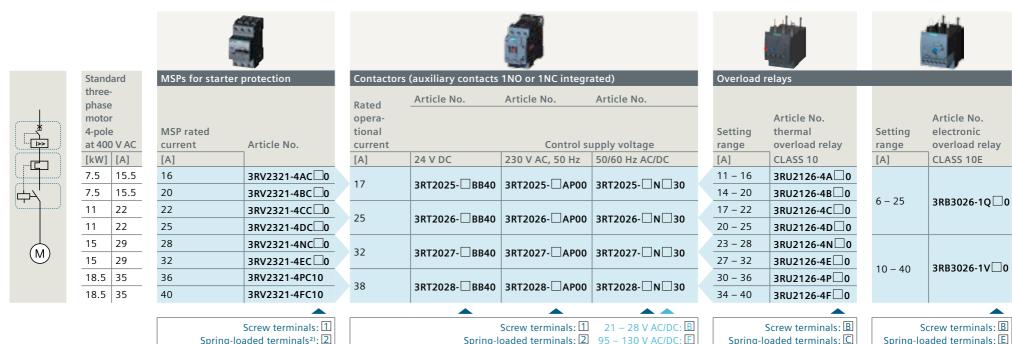

200 – 280 V AC/DC: P

Starter combinations size S0: Motor starter protector for motor protection, contactor and current monitoring relay



Assembly up to 18.5 kW (S0)

Motor starter protector for motor protection, 3RW30 soft starter with current monitoring relay (stand-alone installation)

Motor starter protector for motor protection, 3RW40 soft starter (integrated electronic overload relay) with current monitoring relay (stand-alone installation)









4



- 1) Only usable up to 32 A
- 2) The terminal support for standalone assembly is needed to use a 3RR2 current monitoring relay on a 3RW30/40 soft starter. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active.

For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start.

For 3RW40: Activate and deactivate the 3RR2 monitoring relay via the BYPASS output (ramp-up detection).





3

5







- 1) Only usable up to 32 A
- 2) The terminal support for standalone assembly is needed to use a 3RR2 current monitoring relay on a 3RW30/40 soft starter. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active.

For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start.

For 3RW40: Activate and deactivate the 3RR2 monitoring relay via the BYPASS output (ramp-up detection).

	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV202111	3RV2021
2	Link module ¹⁾	3RA2921-1BA00	3RA2921-2GA00
3	Soft starter	3RW302 -1 -1	3RW302 - 2 - 2
4	Terminal support stand-alone	3RU2926-3AA01	3RU2926-3AC01
5	Current monitoring relay2)	3RR2 42-1	3RR2 42-2

	Туре	Screw terminals	Spring-loaded terminals
1	Motor starter protector	3RV2021-1111	3RV2021-122
2	Link module ¹⁾	3RA2921-1BA00	3RA2921-2GA00
3	Soft starter	3RW402 -1 -1	3RW402 - 2 - 2 - 2 2
4	Terminal support stand-alone	3RU2926-3AA01	3RU2926-3AC01
5	Current monitoring relay ²⁾	3RR2 42-1 1	3RR2 42-2 1

Starter combinations in size S0: Motor starter protector for motor protection, 3RW30 soft starter and current monitoring relay




Spring-loaded terminals: 2

Spring-loaded terminals up to 32 A: 2

Spring-loaded terminals: 2 24 – 240 V AC/DC: W

^{*}likewise available as 3RR24 with IO-Link


¹⁾ Rated operational voltage 200 - 480 V

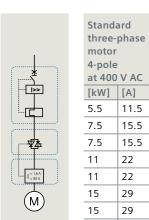

11.5

15.5

15.5

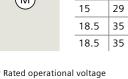





MSPs for motor protection				
Setting range for thermal overload release CLASS 10	Article No.			
[A]				
9 – 12.5	3RV2021-1KA □0			
10 –16	3RV2021-4AA □0			
13 – 20	3RV2021-4BA □0			
16 – 22	3RV2021-4CA □0			
18 – 25	3RV2021-4DA □0			
23 – 28	3RV2021-4NA □0			
27 – 32	3RV2021-4EA □0			
30 – 36	3RV2021-4PA10			
34 – 40	3RV2021-4FA10			


Screw terminals: 1	
Spring-loaded terminals up to 32 A 2	



Soft starters ¹⁾ with overload protection						
Rated opera-	Article No.	Article No.				
tional current	Control sup	ply voltage				
[A]	24 V AC/DC	110 – 230 V AC/DC				
12.5	3RW4024-□BB04	3RW4024-□BB14				
25	3RW4026-□BB04	3RW4026-□BB14				
32	3RW4027-□BB04	3RW4027-□BB14				
38	3RW4028-□BB04	3RW4028-□BB14				

Screw terminals: 1

Spring-loaded terminals: 2

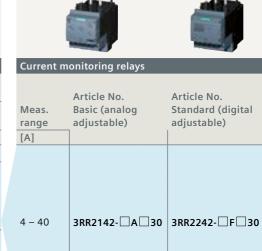

Screw terminals: 1	24 V AC/DC: A
pring-loaded terminals: 2	24 – 240 V AC/DC: W

Fuseless assembly


Size S2 up to 37 kW Motor starter protector for starter protection, contactor and overload relay


Motor	starter	protector	for motor	protection,	contactor	with current	monitoring rel	ay



	Туре	Article number
1	Motor starter protector	3RV233 1
2	Link module (can only be used up to 65 A)	3RA2931-1AA00
3	Contactor	3RT203
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Overload relay	3RU2136-□□B0 or 3RB3□3□-□□B0

	Туре	Article number
1	Motor starter protector	3RV203 - 1 1
2	Link module (can only be used up to 65 A)	3RA2931-1AA00
3	Contactor	3RT203
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Current monitoring relay	3RR2 43-1

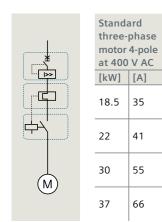

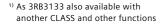



MSPs for starter protection		
Rated breaker		
current	Article No.	
[A]		
36	3RV233□-4PC10	
40	3RV233□-4UC10	
45	3RV233□-4VC10	
52	3RV233□-4WC10	
59	3RV233□-4XC10	
65	3RV233□-4JC10	
73	3RV233□-4KC10	
80 ²⁾	3RV233 -4RC10	

Standard switching capacity 65 kA at 400 V: 1 Increased switching capacity 100 kA at 400 V: 2



Contactors (auxiliary contacts 1NO or 1NC integrated)				
Rated				
operational				
current	Article No.	Article No.		
[A]	230 V AC, 50 Hz	50/60 Hz AC/DC		
40	3RT2035-□AP00	3RT2035-□N□30		
50	3RT2036-□AP00	3RT2036-□N□30		
65	3RT2037-□AP00	3RT2037-□N□30		
80	3RT2038-□AP00	3RT2038-□N□30		

Screw terminals: 1 20 – 33 V AC/DC: B Spring-loaded terminals 83 – 155 V AC/DC: E in auxiliary circuit: 3 175 – 280 V AC/DC: P



Overload relays				
	Article No.			
Setting	thermal		Setti	
range	overload relay,		rang	
[A]	CLASS 10		[A]	
22 – 32	3RU2136-4EB0			
28 – 40	3RU2136-4FB0			
36 – 45	3RU2136-4GB0			
40 – 50	3RU2136-4HB0		20	
47 – 57	3RU2136-4QB0		20 –	
54 – 65	3RU2136-4JB0			
62 – 73	3RU2136-4KB0			
70 – 80	3RU2136-4RB0			



Article No.


electronic

overload relay CLASS 10E¹⁾

20 – 80	3RB3036-1W□□

Contactor mounting: B 0
Straight-thr. transf.: X 1
W 1

Starter combinations in size S2: Motor starter protector for motor protection, contactor with current monitoring relay

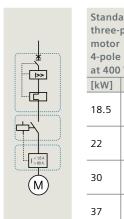


2) Suitable for use with IE3 motors


up to a starting current of 720 A.


For higher starting currents we

recommend using 3RV1 motor

starter protectors size S3.

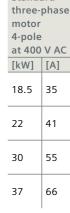

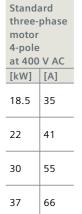

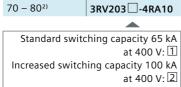

MSPs for motor protection

Article No.

3RV203□-4PA10

3RV203□-4UA10 3RV203□-4VA10

3RV203□-4WA10

3RV203□-4XA10

3RV203□-4JA10

3RV203□-4KA10

Setting range for thermal

overload release

CLASS 10

28 – 36

32 – 40

35 – 45

42 - 52

49 – 59

54 – 65 62 – 73

[A]



Contactors (auxili	ary contacts 1NO o	r 1NC integrated)	
Rated			
operational			
current	Article No.	Article No.	
[A]	230 V AC, 50 Hz	50/60 Hz AC/DC	
40	3RT2035-□AP00	3RT2035-□N□30	
50	3RT2036-□AP00	3RT2036-□N□30	
65	3RT2037-□AP00	3RT2037-□N□30	
80	3RT2038-□AP00	3RT2038-□N□30	

	20 – 33 V AC/DC: B
Spring-loaded terminals	83 – 155 V AC/DC: E
in auxiliary circuit: 3	175 – 280 V AC/DC: P





		THE .
Current moni	toring relays	
Meas. range	Article No. Basic (analog adjustable)	Article No. Standard (digital adjustable)*
8 – 80	3RR2143-□A□30	3RR2243-□F□30

Screw terminals: 1 24 V AC/DC: A Spring-loaded terminals 24 − 240 V AC/DC: W in auxiliary circuit: 3

^{*}likewise available as 3RR24 with IO-Link

Size S2 up to 37 kW

Motor starter protector for motor protection, 3RW30 soft starter without overload protection and current monitoring relay (stand-alone installation)

Motor starter protector for motor protection, 3RW40 soft starter with overload protection and current monitoring relay (stand-alone installation)











- ¹⁾ Can only be used in combination with 3RA2932-1CA00 standard mounting rail adapter (specially for soft starters)
- ² The terminal support for standalone assembly is needed to use a 3RR2 current monitoring relay on a 3RW30/40 soft starter. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active.

For 3RW30: Activate the 3RR2 monitoring relay via an upstream timing relay after the end of the soft start











- 1) Can only be used in combination with 3RA2932-1CA00 standard mounting rail adapter (specially for soft starters)
- ²⁾ The terminal support for standalone assembly is needed to use a 3RR2 current monitoring relay on a 3RW30/40 soft starter. In the starting and stopping phase (generalized phase control), the current monitoring relay shall not be active.

For 3RW40: Activate and deactivate the 3RR2 monitoring relay via the BYPASS output (ramp-up detection).

	Туре	Screw terminals
1	Motor starter protector	3RV203 - 1
2	Link module (can only be used up to 65 A) ¹⁾	3RA2931-1AA00
3	Soft starter	3RW303 -1 -1
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Current monitoring relay ²⁾	3RR2_43-3

	Туре	Screw terminals
1	Motor starter protector	3RV203 - 1
2	Link module (can only be used up to 65 A) ¹⁾	3RA2931-1AA00
3	Soft starter	3RW403 -1 -1
4	Terminal support for stand-alone installation	3RU2936-3AA01
5	Current monitoring relay ²⁾	3RR2 43-3 1

Starter combinations in size S2: Motor starter protector for motor protection, 3RW30 soft starter without overload protection but with current monitoring relay



Starter combinations in size S2: Motor starter protector for motor protection, 3RW40 soft starter with overload protection and current monitoring relay



^{*}likewise available as 3RR24 with IO-Link

Fuseless assembly

Size S3 up to 55 kW

Motor starter protector for starter protection, contactor with overload relay 3

	5		
	Туре	Screw terminals	
1	Motor starter protector	3RV2341_	1
2	Link module ¹⁾	3RA1941-1AA00	2
3	Contactor	3RT204[]-[][]	3
4	Terminal support for stand-alone installation	3RU2946-3AA01	4
5	Overload relay	3RU2146- B0 or 3RB3 4- B0	5
	1) Installation with link module only allowable on standard mounting rail adapter.		

Motor starter protectors for motor protection, contactor and overload relay




	Type	Screw terminals
1	Motor starter protector	3RV204 🗆 - 🗆 - 1 🗆
2	Link module ¹⁾	3RA1941-1AA00
3	Contactor	3RT204
4	Terminal support for stand-alone installation	3RU2946-3AA01
5	Overload relay	3RU2146-□□B0 or 3RB3□4□-□□B0

¹⁾ Installation with link module only allowable on standard mounting rail adapter.



Starter combinations in size S3: Motor starter protector for starter protection, contactor with overload relay

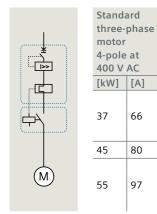

Motor starter protector		
MSP rated		
current	Article No.	
[A]		
50	3RV234□-4HC10	
63	3RV234□-4JC10	
75	3RV234□-4KC10	
84	3RV234□-4RC10	
93	3RV234□-4YC10	
100	3RV234□-4MC10	
	3 VA	

Contactors		
Rated		
operational		
current	Article No.	Article No.
[A]	230 V AC, 50 Hz	50/60 Hz AC/DC
80	3RT2045-□AP00	3RT2045-□N□30
95	3RT2046-□AP00	3RT2046-□N□30
110	3RT2047-□AP00	3RT2047-□N□30

Overload rela	y		
Setting range CLASS 10	Article No. thermal overload relay	Setting range CLASS 10E	Article No. electrical overload relay
36 – 50	3RU2146-4HB0		
45 – 63 57 – 75	3RU2146-4JB0 3RU2146-4KB0		
70 – 90	3RU2146-4LB0	32 – 115	3RB3046-1X□□
80 – 100	3RU2146-4MB0		

Standard switching capacity 65 kA
at 400 V: 1
Increased switching capacity 100 kA
at 400 V: 2

	20 – 33 V AC/DC: B
Spring-loaded terminals in	83 – 155 V AC/DC: E
auxiliary circuit: 3	175 – 280 V AC/DC: P

Screw terminals in auxiliary circuit B
Spring-loaded terminals in auxiliary circuit D
Straight-through transformer, screw terminals in auxiliary circuit W
Straight-through transformer, spring-loaded terminals in auxiliary circuit S

For mounting onto contactor main circuit

Stand-alone installation

1

Fuseless assembly

Size S3 up to 55 kW

Motor starter protector for motor protection, 3RW30 soft starter without overload protection

1
2

Motor starter protector for motor protection, 3RW40 soft starter with overload protection




	Туре	Screw terminals
1	Motor starter protector	3RV204\[- \[\] 1\[\]
2	Link module ¹⁾	3RA1941-1AA00
3	Soft starter	3RW304□-1□□□

	Туре	Screw terminals
1	Motor starter protector	3RV204\[- \[\] 1\[\]
2	Link module ¹⁾	3RA1941-1AA00
3	Soft starter	3RW4041

¹⁾ Installation with link module only allowable on mounting plate.



Starter combinations in size S3: Motor starter protector for motor protection and 3RW40 soft starter with overload protection

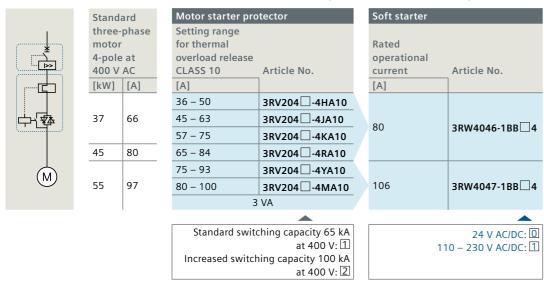

Selection and ordering data for fused feeders of sizes S6, S10, S12 Size S6



			Contactors			
Standa three-p motor	phase	Rated opera- tional		Control supply	Article No.	Article No.
at 400 [kW]		current [A]	Solenoid-operated mechanism	voltage [V AC/DC]	contactors	contactors
55	97		Conventional	220 – 240	3RT1054-1AP36	-
		115	Electronic			
		113	– for 24 V DC PLC output	200 – 277	3RT1054-1NP36	-
			– for 24 V DC PLC output, w. RLT ¹⁾	200 – 277	3RT1054-1PP35	-
75	132		Conventional	220 – 240	3RT1055-6AP36	-
		150	Electronic			
		150	– for 24 V DC PLC output	200 – 277	3RT1055-6NP36	_
			– for 24 V DC PLC output, w. RLT ¹⁾	200 – 277	3RT1055-6PP35	_
90	160		Conventional	220 – 240	3RT1056-6AP36	
		185	Electronic			-
		100	– for 24 V DC PLC output	200 – 277	3RT1056-6NP36	-
			– for 24 V DC PLC output, w. RLT ¹⁾	200 – 277	3RT1056-6PP35	_



Overload	relays		
	Article No. electronic		
Setting	overload relay		
range	CLASS 10	Version	
[A]			
50 – 200 50 – 200	3RB2056-1FW2 ²⁾ 3RB2056-1FC2 ²⁾	w. strthrough transf. w. busbar connection	
50 – 200	3KB2U30-1FC2*/	w. busbar connection	



Soft starter	S	
Rated		
opera-	Control	
tional	supply	
current	voltage	Article No.
[A]		
134	230 V AC	3RW4055-6BB44
134	115 V AC	3RW4055-6BB34
162	230 V AC	3RW4056-6BB44
162	115 V AC	3RW4056-6BB34

¹⁾ RLT: remaining lifetime ²⁾ As 3RB2143 also available with another CLASS and other functions







Overload r	elays		
Setting range [A]	Article No. electronic overload relay CLASS 10	Version	
55 – 250	3RB2066-1GC2 ²⁾	with busbar connection	
160 – 630	3RB2066-1MC2 ²⁾	with busbar connection	




Ĺ	Soft starter	S	
	Rated		
	opera-	Control	
	tional	supply	
	current	voltage	Article No.
	[A]		
	230 230	230 V AC 115 V AC	3RW4073-6BB44 3RW4073-6BB34
	280 280	230 V AC 115 V AC	3RW4074-6BB44 3RW4074-6BB34

¹⁾ RLT: remaining lifetime

²⁾ As 3RB2163 also available with another CLASS and other functions


Selection and ordering data for fused feeders of sizes S6, S10, S12 Size S12



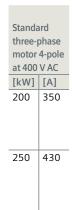

	Contactors			
Rated				
opera-		Control		Article No.
tional		supply	Article No.	vacuum
current	Solenoid-operated mechanism	voltage	contactors	contactors
[A]		[V AC/DC]		
	Conventional	220 – 240	3RT1075-6AP36	3RT1275-6AP36
400	Electronic			
400	– for 24 V DC PLC output	200 – 277	3RT1075-6NP36	3RT1275-6NP36
	– for 24 V DC PLC output, w. RLT ²⁾	200 – 277	3RT1075-6PP35	_
	Conventional	220 – 240	3RT1076-6AP36	3RT1276-6AP36
F00	Electronic			
500	– for 24 V DC PLC output	200 – 277	3RT1076-6NP36	3RT1276-6NP36
	– for 24 V DC PLC output, w. RLT ²⁾	200 – 277	3RT1076-6PP35	_



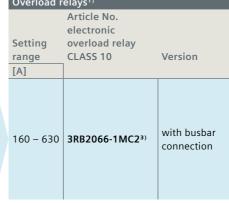



Soft starter	S	
Rated		
opera-	Control	
tional	supply	
current	voltage	Article No.
[A]		
356	230 V AC	3RW4075-6BB44
356	115 V AC	3RW4075-6BB34
432	230 V AC	3RW4076-6BB44
432	115 V AC	3RW4076-6BB34

SENTRON 3V circuit breakers are suitable for fuseless short-circuit and overload protection of soft starters from size S6 upward. For more detailed information, please refer to the catalog.

For applications over 100 A, SIRIUS contactors can be combined with SENTRON 3VL circuit breakers. For more detailed information, please refer to the configuring aid "Configuring SIRIUS load feeders in fuseless design."

¹⁾ When using trip CLASS 20, refer to the configuration aid "Configuring SIRIUS fuseless load feeders," and to the catalog

²⁾ RLT: remaining lifetime


³⁾ As 3RB2163 also available with another CLASS and other functions

Fuseless load feeders up to 15 kW



Standard		3RA21 direct-on-line starters		
three-phase		Setting range		
motor 4-pole at 400 V AC		for thermal		
	1	overload release	Type of coordination "2"	
[kW]	[A]	[A]	at Iq = 150 kA at 400 V	
0.06	0.20	0.14 - 0.2	3RA2110-0B	
0.06	0.20	0.18 – 0.25	3RA2110-0C	
0.09	0.30	0.22 – 0.32	3RA2110-0D15-1 S00	
0.09	0.30	0.28 - 0.4	3RA2110-0E	
0.12	0.44	0.35 – 0.5	3RA2110-0F	
0.18	0.60	0.45 – 0.63	3RA2110-0G 🗌 15-1 🔲 🔲 🗎 S00	
0.18	0.60	0.55 – 0.8	3RA2110-0H 🗌 15-1 🔲 🔲 🗎 S00	
0.25	0.85	0.7 – 1	3RA2110-0J 🗌 15-1 🔲 🔲 🗎 S00	
0.37	1.10	0.9 – 1.25	3RA2110-0K 🗌 15-1 🔲 🔲 🗎 S00	
0.55	1.50	1.1 – 1.6	3RA2110-1A 🗌 15-1 🔲 🔲 🗎 S00	
0.75	1.90	1.4 – 2	3RA2110-1B 🗌 15-1 🔲 🔲 🗎 S00	
0.75	1.90	1.8 – 2.5	3RA2110-1C	
1.1	2.07	2.2 – 3.2	3RA2110-1D 🗌 15-1 🔲 🔲 🗎 S00	
1.5	3.60	2.8 – 4	3RA2110-1E 🗌 15-1 🔲 🔲 🔲 S00	
1.5	3.60	3.5 – 5	3RA2120-1F □ 24-0 □ □ □ S0	
2.2	4.90	4.5 – 6.3	3RA2120-1G 24-0	
3	6.50	5.5 – 8	3RA2120-1H 24-0	
4	8.50	7 – 10	3RA2120-1J □24-0 □□□ S0	
5.5	11.5	9 – 12.5	3RA2120-1K	
7.5	15.5	10 – 16	3RA2120-4A 26-0 50	
7.5	15.5	13 – 20	3RA2120-4B 27-0 50	
11	22	16 – 22	3RA2120-4C 27-0 50	
11	22	18 – 25	3RA2120-4D 27-0 50	
15	29	23 – 28	3RA2120-4N	
15	29	27 – 32	3RA2120-4E	



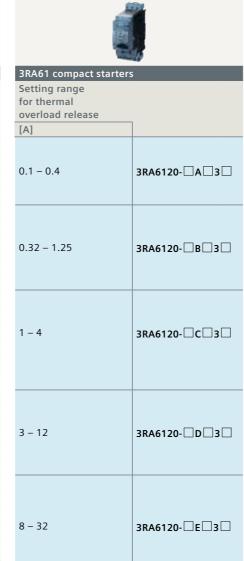

Withou	ut terminals: 0	0
With screv	w terminals: 1	2
With spring-loade	d terminals: 2	2
	24 V ACIDC.	R

24 V AC/DC: B	
110 – 240 V AC/DC: P	



SIRIUS 3RM1 motor star	ters
Setting range	
for thermal	
overload release	1
[A]	
0.1 – 0.5	3RM1□01□AA□4
0.4 – 2.0	3RM1□02□AA□4
1.6 – 7.0 (10 A)*	3RM1□07□AA□4
Direct-on-line s	starter 🖸
Failsafe direct-on-line	starter 1

Direct-on-line starter ① Failsafe direct-on-line starter ①
Screw terminals: ① Spring-loaded terminals: ② Mixed connection method: ③
24 V DC Us ① 110 – 230 V AC; 110 V DC Us ①

Note: The 3RM1 motor starters do not have integral short-circuit protection. They can be used very effectively in combination with SIRIUS motor starter protectors in group assemblies, for example.

^{*}Operation of resistive loads with maximum 10 A

Fuseless load feeders up to 15 kW



Standard		3RA22 reversing star	ters
three-p		Setting range	
motor		for thermal overload release	Type of coordination "2" at Iq = 150 kA at 400 V
[kW]	[A]	[A]	
0.06	0.20	0.14 - 0.2	3RA2210-0B
0.06	0.20	0.18 – 0.25	3RA2210-0C 🗌 15-2 🔲 🔲 🗎 S00
0.09	0.30	0.22 - 0.32	3RA2210-0D 🗌 15-2 🔲 🔲 📗 S00
0.09	0.30	0.28 - 0.4	3RA2210-0E
0.12	0.44	0.35 - 0.5	3RA2210-0F 🗌 15-2 🔲 🔲 🗎 S00
0.18	0.60	0.45 - 0.63	3RA2210-0G 🗌 15-2 🔲 🔲 📗 S00
0.18	0.60	0.55 – 0.8	3RA2210-0H 🗌 15-2 🔲 🔲 🔲 S00
0.25	0.85	0.7 – 1	3RA2210-0J 🗌 15-2 🔲 🔲 🔲 S00
0.37	1.10	0.9 – 1.25	3RA2210-0K 🗌 15-2 🔲 🔲 🗎 S00
0.55	1.50	1.1 – 1.6	3RA2210-1A 🗌 15-2 🔲 🔲 🗎 S00
0.75	1.90	1.4 – 2	3RA2210-1B 🗌 15-2 🔲 🔲 🗎 S00
0.75	1.90	1.8 – 2.5	3RA2210-1C 🗌 15-2 🔲 🔲 🔲 S00
1.1	2.70	2.2 – 3.2	3RA2210-1D 🗌 15-2 🔲 🔲 🔲 S00
1.5	3.60	2,8 – 4	3RA2210-1E 🗌 15-2 🔲 🔲 🔲 S00
1.5	3.60	3.5 – 5	3RA2220-1F 24-0 50
2.2	4.90	4.5 – 6.3	3RA2220-1G
3	6.50	5.5 – 8	3RA2220-1H 🗌 24-0 🔲 🔲 🔲 S0
4	8.50	7 – 10	3RA2220-1J 24-0 50
5.5	11.5	9 – 12.5	3RA2220-1K 24-0 50
7.5	15.5	10 – 16	3RA2220-4A 26-0 50
7.5	15.5	13 – 20	3RA2220-4B
11	22	16 – 22	3RA2220-4C 27-0 50
11	22	18 – 25	3RA2220-4D 27-0 . S0
15	29	23 – 28	3RA2220-4N 🗌 27-0 🔲 🔲 🗎 S0
15	29	27 – 32	3RA2220-4E 27-0 50





3RA62 compact starter	S
Setting range for thermal overload release [A]]
0.1 – 0.4	3RA6250-□A□3□
0.32 – 1.25	3RA6250-□B□3□
1 – 4	3RA6250-□C□3□
3 – 12	3RA6250-□D□3□
8 – 32	3RA6250-□E□3□

_	
Without terminals: 0	0
With screw terminals: 1	2
With spring-loaded terminals: 2	2
24 V AC/DC:	В
110 – 240 V AC/DC:	P



SIRIUS 3RM1 motor star	ters
Setting range for thermal overload release [A]	
0.1 – 0.5	3RM1□01□AA□4
0.4 – 2.0	3RM1□02□AA□4
1.6 – 7.0 (10 A)*	3RM1□07□AA□4


Direct-on-line starter $\boxed{2}$ Failsafe direct-on-line starter $\boxed{3}$
Screw terminals: 1 Spring-loaded terminals: 2 Mixed connection method: 3
24 V DC Us 0

Note: The 3RM1 motor starters do not have integral short-circuit protection. They can be used very effectively in combination with SIRIUS motor starter protectors in group assemblies, for example.

^{*}Operation of resistive loads with maximum 10 A

Function modules for IO-Link or AS-i that are mounted on contactors (24 V DC) with communication interface are required for connecting the load feeders to the controller. Depending on the version, these communicate with an IO-Link interface group or any AS-i master. Alternatively, the contactors can be connected to the controller via IO-Link and by means of the 3RB24 overload relay. The 3RR24 current monitoring relays serve to provide optimum current monitoring of the overall system or the driven process.

Typical configuration in the environment of IO-Link

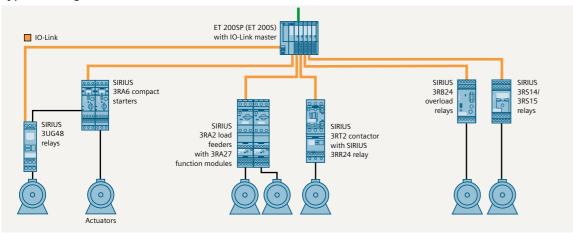


	Rated
Three-	opera-
phase	tional
motor	current
400 V	contactor
[kW]	[A]
3	7
4	9
5.5	12
7.5	16
5.5	12
7.5	16
11	25
15	32
18.5	38

Control supply voltage Aux. contacts Control supply voltage Article No. DC 24 V 1NC				
Aux. contacts Article No. DC 24 V 1NC 3RT2015-□BB42-0CC0 1NO 3RT2015-□BB41-0CC0 1NC 3RT2016-□BB42-0CC0 1NO 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB41-0CC0 1NO 3RT2018-□BB41-0CC0 1NO 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	Contactors S00 v	Contactors S00 with communication interface		
Aux. contacts Article No. DC 24 V 1NC 3RT2015-□BB42-0CC0 1NO 3RT2015-□BB41-0CC0 1NC 3RT2016-□BB42-0CC0 1NO 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB42-0CC0 1NO 3RT2018-□BB41-0CC0 Contactors S0 with communication interface 1NO + 1NC 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0				
Aux. contacts Article No. DC 24 V 1NC 3RT2015-□BB42-0CC0 1NO 3RT2015-□BB41-0CC0 1NC 3RT2016-□BB42-0CC0 1NO 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB41-0CC0 1NO 3RT2018-□BB41-0CC0 1NO 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0				
DC 24 V 1NC 3RT2015-□BB42-0CC0 1NO 3RT2015-□BB41-0CC0 1NC 3RT2016-□BB42-0CC0 1NO 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB42-0CC0 1NO 3RT2018-□BB41-0CC0 1NO 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0				
1NC 3RT2015-□BB42-0CC0 1NO 3RT2015-□BB41-0CC0 1NC 3RT2016-□BB42-0CC0 1NO 3RT2016-□BB41-0CC0 1NC 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB41-0CC0 1NO 3RT2018-□BB41-0CC0 Contactors S0 with communication interface 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	Aux. contacts	1		
1NO 3RT2015-□BB41-0CC0 1NC 3RT2016-□BB42-0CC0 1NO 3RT2016-□BB41-0CC0 1NC 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB42-0CC0 1NO 3RT2018-□BB41-0CC0 Contactors S0 with communication interface 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0		DC 24 V		
1NC 3RT2016-□BB42-0CC0 1NO 3RT2016-□BB41-0CC0 1NC 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NO 3RT2018-□BB41-0CC0 1NO 3RT2018-□BB41-0CC0 1NO 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NC	3RT2015-□BB42-0CC0		
1NO 3RT2016-□BB41-0CC0 1NC 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB41-0CC0 1NO 3RT2018-□BB41-0CC0 1NO 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NO	3RT2015-□BB41-0CC0		
1NC 3RT2017-□BB42-0CC0 1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB41-0CC0 1NO 3RT2018-□BB41-0CC0 Contactors S0 with communication interface 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NC	3RT2016-□BB42-0CC0		
1NO 3RT2017-□BB41-0CC0 1NC 3RT2018-□BB42-0CC0 1NO 3RT2018-□BB41-0CC0 Contactors S0 with communication interface 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NO	3RT2016-□BB41-0CC0		
1NC 3RT2018-□BB42-0CC0 1NO 3RT2018-□BB41-0CC0 Contactors S0 with communication interface 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NC	3RT2017-□BB42-0CC0		
1NO 3RT2018-□BB41-0CC0 Contactors S0 with communication interface 1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NO	3RT2017-□BB41-0CC0		
Contactors S0 with communication interface 1NO + 1NC	1NC	3RT2018-□BB42-0CC0		
1NO + 1NC 3RT2024-□BB40-0CC0 1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NO	3RT2018-□BB41-0CC0		
1NO + 1NC 3RT2025-□BB40-0CC0 1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	Contactors SO with communication interface			
1NO + 1NC 3RT2026-□BB40-0CC0 1NO + 1NC 3RT2027-□BB40-0CC0	1NO + 1NC	3RT2024-□BB40-0CC0		
1NO + 1NC 3RT2027- BB40-0CC0	1NO + 1NC	3RT2025-□BB40-0CC0		
	1NO + 1NC	3RT2026-□BB40-0CC0		
1NO + 1NC 3RT2028- BB40-0CC0	1NO + 1NC	3RT2027-□BB40-0CC0		
	1NO + 1NC	3RT2028-□BB40-0CC0		

Screw terminals: 1 Spring-loaded terminals \$00/\$0: 2

Typical configuration in the environment of AS-Interface

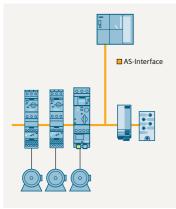

Article No.
6GK7343-2AH11-0XA0
6ES7392-1AJ00-0AA0
6ES7392-1BJ00-0AA0
6GK1415-2BA10
6GK1415-2BA20
3RX9501-0BA00
3RX9501-1BA00
3RX9502-0BA00
3RX9503-0BA00
See Industry Mall or Catalog IKPI

18.5	40
22	50
30	65
37	80

37	80
45	95
55	110

Contactors S2 with communication interface	
3RT2035-□NB30-0CC0	
3RT2036-□NB30-0CC0	
3RT2037-□NB30-0CC0	
3RT2038-□NB30-0CC0	
<u> </u>	

Screw terminals: 1 Spring-loaded terminals in auxiliary circuit: 3

Contactors S3 with communication interface	
	3RT2045-□NB30-0CC0
	3RT2046-□NB30-0CC0
	3RT2047-□NB30-0CC0
	_

Screw terminals: 1 Spring-loaded terminals in auxiliary circuit: 3

Function modules for mounting on 3RT2 contactors and for connecting to the automation level

Parallel wiring



Direct-on-line starter with time-delay relay			
Article No.			
ON-delay	S00/S0	3RA2811- 🗌 CW10	
	S2/S3	3RA2831- 🗌 DG10	
	S2/S3		
OFF-delay	S00/S0	3RA2812- CW10	
(with aux. voltage)	S2/S3	3RA2832- 🗌 DG10	
	S2/S3	3RA2832- 🗆 DH10	

		111
Reversing starter kits		
		Article No.
Wiring kits for contactors	S00	3RA2913-2AA
Wiring kits for contactors	S0	3RA2923-2AA 🗆
Wiring kits for contactors	52	3RA2933-2AA 🗌
Wiring kits for contactors	S3	3RA2943-2AA

Star-delta (wye-delta) starter1)2)4)	Star-delta (wye-delta) starter1)2)4)		
		Article No.	
Function module		3RA2816-0EW20	
Wiring kits for contactors	S00	3RA2913-2BB □	
Wiring kits for contactors	S0	3RA2923-2BB	
Wiring kits for contactors	S2	3RA2933-2BB	
Wiring kits for contactors	S3	3RA2943-2BB □	

IO-Link



IO-Link connection for direct-on-line starter ^{1) 2)}		
Article No.		
3RA2711- 🗌 AA00		



IO-Link connection for reversing starter ^{1) 2) 3)}			
		Article No.	
Function module		3RA2711- 🗌 BA00	
Wiring kits for contactors	S00	3RA2913-2AA 🗌	
Wiring kits for contactors	S0	3RA2923-2AA 🗌	
Wiring kits for contactors	S2	3RA2933-2AA 🗌	
Wiring kits for contactors	S3	3RA2943-2AA □	



AS-Interface



AS-Interface connection for direct-on-line starter ¹⁾		
Article No.		
Function module	3RA2712- 🗌 AA00	



AS-Interface connection for reversing starter ^{1) 2) 3)}			
		Article No.	
Function module		3RA2712- ☐ BA00	
Wiring kits for contactors	S00	3RA2913-2AA	
Wiring kits for contactors	S0	3RA2923-2AA	
Wiring kits for contactors	S2	3RA2933-2AA	
Wiring kits for contactors	S3	3RA2943-2AA 🗆	

		terminals: 1
S	pring-loaded	terminals: 2





AS-Interface connection for star-delta (wye-delta) combinations 1) 2) 4)

		Article No.
Function module		3RA2712- 🗌 CA00
Wiring kits for contactors	S00	3RA2913-2BB □
Wiring kits for contactors	S0	3RA2923-2BB
Wiring kits for contactors	S2	3RA2933-2BB □
Wiring kits for contactors	S3	3RA2943-2BB □

Screw terminals: 1 Spring-loaded terminals: 2

Screw terminals: 1

Spring-loaded terminals: 2

The contactor assemblies represented above can be combined with motor starter protectors, overload relays, and monitoring relays

¹⁾ The wiring modules for the control circuit are not required 2) The contactor with basic module must be implemented as a communication contactor

³⁾ Comprising 1 basic module and 1 coupling module ⁴⁾ Comprising 1 basic module and 2 coupling modules

IO-Link



*
M

Setting range 3RA64 direct-on-line 3RA65 reversing starter starter	
overload release CPS ¹⁾ CPS ¹⁾	
[A] 24 V DC 24 V DC	
0.1 − 0.4 3RA6400- ☐ AB42 3RA6500- ☐ AB42	
0.32 − 1.25 3RA6400- □ BB42 3RA6500- □ BB42	
1 − 4 3RA6400- □ CB42 3RA6500- □ CB42	
3 − 12 3RA6400- □ DB42 3RA6500- □ DB42	
8 – 32 3RA6400- ☐ EB42 3RA6500- ☐ EB42	




Accessories for compact starter with IO-Link, 3RA27 function modules and 3RB24 overload relays with IO-Link

Module connector, 14-pole, 8 cm, for 1 space between two contactors	3RA2711-0EE02
Module connector, 14-pole, 21 cm, for diverse space combinations between two contactors	3RA2711-0EE03
Operator panel (incl. enabling module and interface cover)	3RA6935-0A
Connecting cable for operator panel	3RA6933-0A

AS-Interface



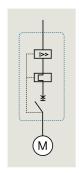

Setting range	3RA61 direct-on-line starter	3RA62 reversing starter
for electronic		
overload release	CPS ¹⁾	CPS ¹⁾
[A]	24 V AC/DC	24 V AC/DC
0.1 - 0.4	3RA6120- □ AB34	3RA6250- □ AB34
0.32 – 1.25	3RA6120- □ BB34	3RA6250- ☐ BB34
1 – 4	3RA6120- □ CB34	3RA6250- □ CB34
3 – 12	3RA6120- □ DB34	3RA6250- □ DB34
8 – 32	3RA6120- □ EB34	3RA6250- ☐ EB34


¹⁾ CPS: Control and protective switching device, IEC/EN 60947-6-2

Screw terminals: 1	Scrow torminals. 1
Spring-loaded	Screw terminals: 1 Spring-loaded
terminals: 2	terminals: 2




AS-Interface accessories	
AS-i addressing unit	3RK1904-2AB0
AS-Interface mounting module for 3RA6 compact starter (24 V DC)
Without additional inputs/outputs	3RA6970-3A
With two local inputs	3RA6970-3B
With two free external inputs	3RA6970-3C
With one free external input and one free external output	3RA6970-3D
With two free external outputs	3RA6970-3E
For local control	3RA6970-3F

3RA68 infeed system (compact starter)

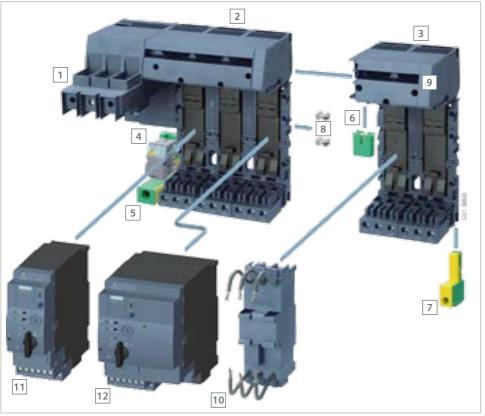

Item 4, 8 and 9 already included in the scope of delivery

	Type	Version of terminal	Article No.
1	For busbar mounting		
	Infeed with screw with permanent introduce no left ansion module	Screw terzsinals up to 63 A	3RA6812-8AB
	Infeed with screwith permanent pansion module	Sp§ing-loaded serminals up to 638A	3RA6812-8AC
	Infeed with screw termid 50 – 70 mm² left with permanently fitted 3-socket expansion modul	Sc ew terminals up to 100 A	3RA6813-8AB
	Infeed with screw terming 15 5 – 70 mm² left with permanently fitted 3-socilet expansion module	Sping-loaded to 100 A	3RA6813-8AC
	Terminal covers for infeled to screw terminals	25/35 mm²	3RA6880-2AB
	Terminals	50/70 mm²	3RA6880-3AB
	g-loaded terminals 25/35 mm ²		3RA6830-5AC
2	ts	Screw terminals	3RA6823-0AB
3	230 15	Screw terminals	3RA6822-0AB
	2-socket expansio	Spring-loaded terminals	3RA6822-0AC
	3-socket expansion th 3 slots	Spring-loaded terminals	3RA6823-0AC
4	Expansion plan between 2 expansion modules (already included in the scope of delivery of the		
5	PE infeed		
	PE infeed 25-200mn ²	Screw terminals	3RA6860-6AB
	PE infeed 25/35 mm ²	Spring-loaded terminals	3RA6860-5AC
6	PE expansion plug		
7	PE tap		
	PE tap 6/10 mm²	Screw terminals	3RA6870-4AB
	PE tap 6/10 mm ²	Spring-loaded terminals	3RA6870-3AC
8	Connecting wedge (already included in scope	of 2 and 3)	
9	Cover cap of the power bus (already included	in scope of 1)	
	Further accessories		
10	Adapter 45 mm for 3RV motor starter protector with screw terminals		3RA6890-0BA
	Expansion plug for SIRIUS 3RV29 infeed system		3RA6890-1AA
	Terminal block for integration of 1-, 2- or 3-pole components	Spring-loaded terminals	3RV2917-5D
11	3RA61 compact direct-on-line starter		
12	3RA62 compact reversing starter		

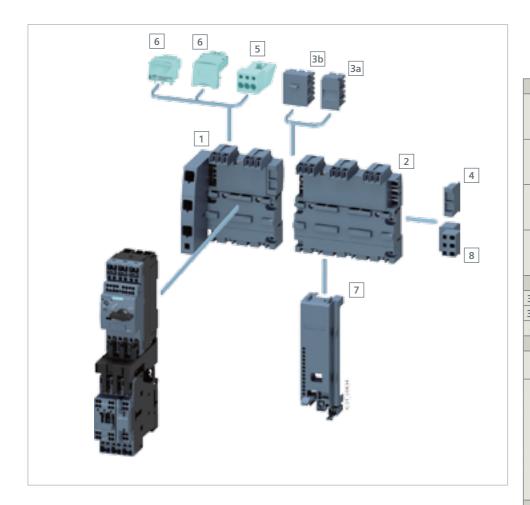

	Type	Vars on	40	Size 10 18 / 13 1 23 n o or starter protectors	Article No.
1	3-phase busbars With infeed on tincl. 3RV2917-6A	motor starter otectors	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	5000, 50	3RV2917-1A
	With infeed on the right incl. 3RV291.7-6A end cove	For 2 motor stap		500, 50	3RV2917-1E
	For system expansion incl. 3RV2917-58400 expansion plug	For 2 motor starter protectors		SOLOSIO	3RV2917-4A
2	For syllom explosion incl. 3Rv29, 7-9-00	For 3 motor starter protectors		S00, S0	3RV2917-4B
3a 3b 4	End cover Plug-in connectors				3RV2917-5BA00 3RV2917-5E 3RV2917-6A
5	Terminal block for device infeed	Spring-loaded terminals	1 unit	S00/S0	3RV2917-5FA00
	For contacting the motor starter	Screw terminals	1 unit 10 un.	S00 S00	3RV2917-5CA00 3RV2917-5C
		Spring-loaded terminals	1 unit 10 un.	S00 S00	3RV2917-5AA00 3RV2917-5A
6		Screw terminals	1 unit 10 un.	S0 S0	3RV1927-5AA00 3RV1927-5A
		Spring-loaded terminals	1 unit 10 un.	S0 S0	3RV2927-5AA00 3RV2927-5A
	Accessories				
7	Contactor base for assembling d reversing starters or preassemble	irect-on-line or ed 3RA2 load feeders	1 unit	S00	3RV2917-7AA00
,	Contactor base for assembling direct-on-line or reversing starters or preassembled 3RA2 load feeders		1 unit	S00/S0	3RV2927-7AA00
8	Terminal block for integration of 1-, 2- or 3-pole components				3RV2917-5D
	Mounting rail, 45 mm, for inte devices into the system, such a circuit breakers				3RV1917-7B

3-phase busbars / 8US busbar adapters for infeed


Туре	Size	Article No.			
3-phase busbars					
For infeed to several 3RV2 motor starter protectors (screw terminals) mounted side-by-side on standard rails, with touch protection		Modular spacing 45 mm	Modular spacing 55 mm	Modular spacing 63 mm	Modular spacing 75 mm
For 2 months and advantage and advantage	S00, S0	3RV1915-1AB	3RV1915-2AB	3RV1915-3AB	_
For 2 motor starter protectors	S2	_	3RV1935-1A	_	3RV1935-3A
1 Fax 2 master stanton must stanton	S00, S0	3RV1915-1BB	3RV1915-2BB	_	_
For 3 motor starter protectors	S2	_	3RV1935-1B	_	3RV1935-3B
F 4	S00, S0	3RV1915-1CB	3RV1915-2CB	3RV1915-3CB	-
For 4 motor starter protectors	S2	_	3RV1935-1C	_	3RV1935-3C
For 5 motor starter protectors	S00, S0	3RV1915-1DB	3RV1915-2DB	_	_
3-phase infeed terminals					
2 Commention for mark to	S00, S0	3RV2925-5AB			
Connection from above	S2	3RV2935-5A			
Connection from below	S00, S0	3RV2915-5B			
3-phase infeed terminals for construct	ing type E stai	rters			
Comment in a formation	S00, S0	3RV2925-5EB			
Connection from above	S2	3RV2935-5E			
Accessories					
Cover caps for connection tags	S00, S0	3RV1915-6AB			
Touch protection for empty positions	S2	3RV1935-6A			

	For MSPs, size	Rated operational current [A]	Adapter length [mm]	Adapter width [mm]	Article No.
3	Busbar adap	ters for 60-mm	-		
	For 3RM1 m	otor starters w	ith fuse mo	dule 3RM1	93 🗆 - 🗆 🗆
	22.5 mm	7	200	22.5	8US1216-0AS00 ²⁾
	For motor st terminals	tarter protector	rs and load	feeders wi	th screw type
	S00, S0	25	200	45	8US1251-5DS10
	S0	32	200	45	8US1251-5NS10
	52	80	200	55	8US1261-5MS13
	S2	80	260	55	8US1261-6MT10
	S2 ¹⁾	80	260	118	8US1211-6MT10
	S3	100	215	72	8US1211-4TR00
	For motor starter protectors and load feeders with spring-loaded terminals				th spring-loaded
	S00, S0	25	200	45	8US1251-5DS11
	S00, S0	25	260	45	8US1251-5DT11
1	SO .	32	260	45	8US1251-5NT11

For the assembly of feeders for reversing starters comprising a motor starter protector and two contactors


Adapter for 8US1616-0AK02 compact busbar system

|--|

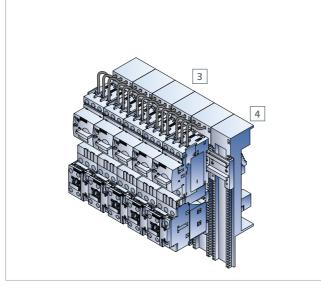

п	Accessories			
4	Device holder	200	45	8US1250-5AS10
4	for lateral mounting on busbar adapters	260	45	8US1250-5AT10
	Side module for widening busbar adapters	200	9	8US1998-2BJ10
	Spacer for fixing the feeder onto the busbar adapter			8US1998-1BA10
	Vibration and shock kit for increased vibration and shock loads S00/S0			8US1998-1CA10
	S2			8US1998-1DA10

Accessories for 3RV2 motor starter protectors (S00–S3)

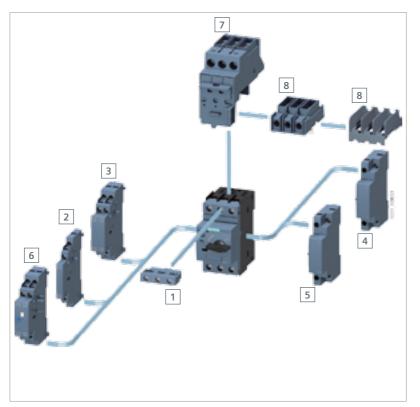




			Article No.	Article No.
			screw	spring-loaded
	Туре	Version	terminals	terminals
	Accessories for 3RV motor starter prot	ectors sizes 300 S	50, S2	<i>(</i> 280)
	Auxiliary and signaling switches	ATT		
		100	3RV2	-
1	Transverse auxiliary switch		3RV2901-1E	⊘RV2901-24
	19		3RV2901-1F	3RV290+2
1	Solid-state-compatible auxiliary swi		3RV2901-1G	- 00 00
	10	2	3RV2901-1A	⊘ RV2901-2 /
2	Lateral auxiliary switch with 2 contacts	21	3RV2901-1B	3RV2901-218
		2NL	3RV29 1 C	3RV2901-26
3	Lateral auxiliary switch wit	2ND - 2NC	3RV29	-
6	Signaling switch		3RV29 1-16	3RV2 2 2184
	Auxiliary releases	ا ا ا ا	8	
4	Shunt release ¹⁾	20 – 70 V AC/DC	3RV2902-1DB0	3RV2 52 8 B0
4	Shunt release?	210 + 240 V AC	3RV2902-1DP0	3RV2902-2LP0
5	Undervoltage releases	230 V AC	3RV2902-1AP0	3RV2902-2AP0
5	Undervoltage release	400 V.AC	3RV2902-1AV0	3RV2902-2AV0
	No de maria de la companya del companya de la companya del companya de la company	23000	3RV2922-1CP0	3RV2922-2CP0
5	Undervoltage releterations auxiliary	400 AT AG	3RV2922-1CV0	3RV2922-2CV0
	leading auxiliary	015	3RV2922-1CV1	3RV2922-2CV1
	Isolator module and	Time of the second		
7	Isolator module		3RV2928-1A	_
/	Isolator module		3RV2938-1A	_
8	Terminal block type E for increase	500, 50	3RV2928-1H	
0	clearances and creepage distances	300, 30	3NVZ9Z0-1П	
8	Terminal block type E for S3	52	3RT2946-4GA07	_
Q	Phase barriers	500,50	3RV2928-1K	-
8	f. incr. clearances/creepage distances	S2	3RV2938-1K	-

Type	Version	Article No.
Door-coupling rotary operating mechanisms		
Door-coupling rotary operating mech. (black) with extension shaft ²⁾	130 mm	3RV2926-0B
Door-coupling rotary operating mech. (black) with extension shaft	330 mm	3RV2926-0K
EMERGENCY-STOP door-cpl. rot. oper. mech. (red/yellow) w. ext. shaft ²⁾	130 mm	3RV2926-0C
EMERGENCY-STOP door-cpl. rot. oper. mech. (red/yellow) w. ext. shaft	330 mm	3RV2926-0L
Molded-plastic enclosures for surface mounting		
For motor starter protector (+ lateral auxiliary switch) S00, S0	54 mm	3RV1923-1CA00
For motor starter protector (+ lateral aux. switch + auxiliary release) S00, S0	72 mm	3RV1923-1DA00
For motor starter protector (+ lateral auxiliary switch + auxiliary release) S2	82 mm	3RV1933-1DA00
Molded-plastic enclosure for surface mounting with EMERGENCY-STOP door-cpl. rot. op. mech. f. MSP (+ lateral aux. switch) S00, S0	54 mm	3RV1923-1FA00
Molded-plastic enclosure for surface mounting w. EMERGENCY-STOP door-cpl. rot. op. mech. f. MSP (+ lateral aux. switch + aux. release) S00, S0	72 mm	3RV1923-1GA00
Molded-plastic enclosure for surface mounting w. EMERGENCY-STOP door-cpl. rot. oper. mech. f. MSP (+ lateral aux. switch + aux. release) S2	82 mm	3RV1933-1GA00


¹⁾ Other versions on request 2) The operating mechanism is also suitable for 3RA6 compact starters

Accessories for 3RT201 contactors (S00)

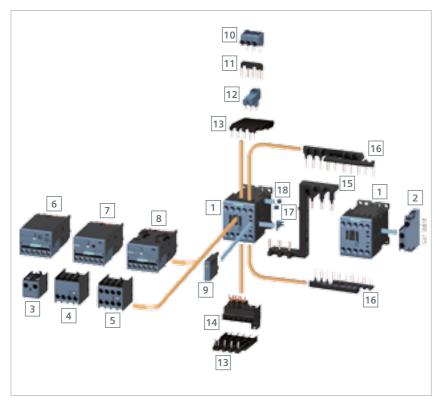


			Article No.	Article No.
	Fitting of auxiliary switches on the front for	Version	screw terminals	spring-loaded terminals
1	3RT2 contactors	Standard	terminais	terminars
		2NO	3RH2911-1DA20	3RH2911-2DA20
	Laterally mountable auxiliary switch blocks	1NO + 1NC	3RH2911-1DA11	3RH2911-2DA11
		2NC	3RH2911-1DA02	3RH2911-2DA02
2	Solid-state-compatible auxiliary switch block laterally mountable, right	1NO + 1NC	-	3RH2911-2DE11
	Solder pin adapter for contactors with 4-pole auxiliary switch block	For 4 contactors (package)	3RT1916-4KA2	-
	1-pole auxiliary switch block,	1NO	3RH2911-1AA10	-
3	cable entry from above	1NC	3RH2911-1AA01	-
3	1-pole auxiliary switch block,	1NO	3RH2911-1BA10	-
	cable entry from below	1NC	3RH2911-1BA01	-
	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1LA11	-
4	cable entry from above	2NO	3RH2911-1LA20	-
4	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1MA11	-
	cable entry from below	2NO	3RH2911-1MA20	-
	1- to 4-pole auxiliary switch block	1NC	3RH2911-1HA01	3RH2911-2HA01
		2NC	3RH2911-1HA02	3RH2911-2HA02
		1NO + 1NC	3RH2911-1HA11	3RH2911-2HA11
		2NO + 2NC	3RH2911-1HA22	3RH2911-2HA22
5		1NO	3RH2911-1HA10	3RH2911-2HA10
		2NO	3RH2911-1HA20	3RH2911-2HA20
	Solid-state-compatible auxiliary switch blocks	1NO + 1NC	3RH2911-1NF11	3RH2911-2NF11
	2-pole	2NO	3RH2911-1NF20	3RH2911-2NF20
	2 μοιε	2NC	3RH2911-1NF02	3RH2911-2NF02
6	7 8 Function modules for mounting on contactor	ors and for connecting	g to the automation	level
	Surge suppressor, e.g. varistor			
9	Without LED	127 – 240 V AC	3RT2916-1BD00	3RT2916-1BD00
	With LED	127 – 240 V AC	3RT2916-1JL00	3RT2916-1JL00
10	3-phase infeed terminal	Conductor cross section: 6 mm	3RA2913-3K	-
11	Neutral bridge, 3-pole	-	3RT1916-4BA31	3RT2916-4BA32
12	Parallel connector, 3-pole	For main circuits	3RT1916-4BB31	-
13	Solder pin adapter for contactors	For 4 contactors (package)	3RT1916-4KA1	-
14	Terminal module	Adapter	3RT1916-4RD01	-
14	for contactor with screw terminals	Plug	3RT1900-4RE01	-
15	Safety main circuit connector	-	3RA2916-1A	-
16-	18 Wiring kit	-	3RA2913-2AA1	3RA2913-2AA2

Accessories for 3RT202 contactors (S0)

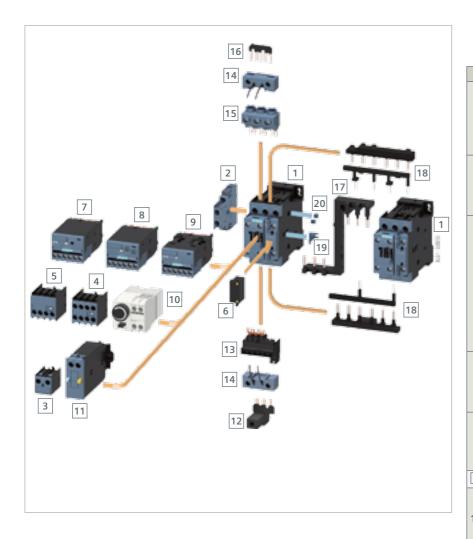


	Fitting of auxiliary switches on the front for	Version	Article No. screw terminals	Article No. spring-loaded terminals
1	3RT2 contactors	Standard		
		2NO	3RH2921-1DA20	3RH2921-2DA20
	Laterally mountable auxiliary switch blocks	1NO + 1NC	3RH2921-1DA11	3RH2921-2DA11
2	auxiliary switch blocks	2NC	3RH2921-1DA02	3RH2921-2DA02
	Solid-state-compatible auxiliary switch block, laterally mountable	1NO + 1NC	-	3RH2921-2DE11
	1-pole auxiliary switch block,	1NO	3RH2911-1AA10	_
	cable entry from above	1NC	3RH2911-1AA01	_
3	1-pole auxiliary switch block,	1NO	3RH2911-1BA10	_
	cable entry from below	1NC	3RH2911-1BA01	_
		1NC	3RH2911-1HA01	3RH2911-2HA01
		2NC	3RH2911-1HA02	3RH2911-2HA02
	1- to 4-pole auxiliary	1NO + 1NC	3RH2911-1HA11	3RH2911-2HA11
	switch block	2NO + 2NC	3RH2911-1HA22	3RH2911-2HA22
4		1NO	3RH2911-1HA10	3RH2911-2HA10
		2NO	3RH2911-1HA20	3RH2911-2HA20
		1NO + 1NC	3RH2911-1NF11	3RH2911-2NF11
	Solid-state-compatible auxiliary	2NO	3RH2911-1NF20	3RH2911-2NF20
	switch blocks 2-pole	2NC	3RH2911-1NF02	3RH2911-2NF02
	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1LA11	_
	cable entry from above	2NO	3RH2911-1LA20	_
5	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1MA11	
	cable entry from below	2NO	3RH2911-1MA20	
	Surge suppressor, e.g. varistor			
6	Without LED	127 – 240 V AC	3RT2926-1BD00	3RT2926-1BD00
	With LED	127 – 240 V AC	3RT2926-1JL00	3RT2926-1JL00
7	8 9 Function modules for mour	iting on contactors and for connecting	to the automation	level
		ON-delay, 0.1 – 30 s	3RT2926-2PA01	_
	Pneumatic	ON-delay, 1 – 60 s	3RT2926-2PA11	_
0	delay block 1NO + 1NC	OFF-delay, 0.1 – 30 s	3RT2926-2PR01	_
	TNO + TNC	OFF-delay, 1 – 60 s	3RT2926-2PR11	_
1	Mechanical latch	230 V AC/DC	3RT2926-3AP31	3RT2926-3AP31
12	Parallel connector, 3-pole	For main circuits	3RT2926-4BB31	_
	Terminal module	Adapter	3RT1926-4RD01	_
13	for contactor with screw terminals	Plug	3RT1900-4RE01	
		Connection from above	3RT2926-4RA11	3RT2926-4RA12
4	Coil terminal module	Connection from below	3RT2926-4RB11	3RT2926-4RB12
		Connection diagonally	3RT2926-4RC11	3RT2926-4RC12
15	3-phase infeed terminal	-	3RV2925-5AB	_
_	Neutral bridge, 3-pole	-	3RT1926-4BA31	3RT2926-4BA32
_	Safety main circuit connector	For series switching of 2 contactors	3RA2926-1A	_
	-20 Wiring kit	For reversing combinations	3RA2923-2AA1	3RA2923-2AA2

Accessories for 3RT203 contactors (S2)

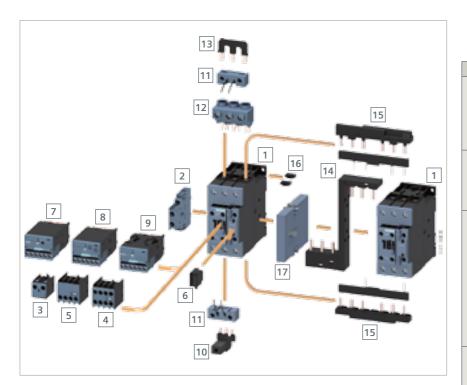


			Article No.	Article No.
	Fitting of auxiliary switches on the front for	Version	screw terminals	spring-loaded terminals
1	3RT2 contactors	Standard	terminais	terminais
•	JAME COMMUNICIONS	2NO	3RH2921-1DA20	3RH2921-2DA20
	Laterally mountable	1NO + 1NC	3RH2921-1DA11	3RH2921-2DA11
2	auxiliary switch blocks	2NC	3RH2921-1DA02	3RH2921-2DA02
_	Solid-state-compatible auxiliary switch block, laterally mountable	1NO + 1NC	-	3RH2921-2DE11
	1-pole auxiliary switch block,	1NO	3RH2911-1AA10	_
3	cable entry from above	1NC	3RH2911-1AA01	_
3	1-pole auxiliary switch block,	1NO	3RH2911-1BA10	_
	cable entry from below	1NC	3RH2911-1BA01	_
		1NC	3RH2911-1HA01	3RH2911-2HA01
		2NC	3RH2911-1HA02	3RH2911-2HA02
	1 to 4 male avvillant avvitale block	1NO + 1NC	3RH2911-1HA11	3RH2911-2HA11
	1- to 4-pole auxiliary switch block	2NO + 2NC	3RH2911-1HA22	3RH2911-2HA22
4		1NO	3RH2911-1HA10	3RH2911-2HA10
		2NO	3RH2911-1HA20	3RH2911-2HA20
	Solid-state-compatible auxiliary switch 2-pole	1NO + 1NC	3RH2911-1NF11	3RH2911-2NF11
		2NO	3RH2911-1NF20	3RH2911-2NF20
		2NC	3RH2911-1NF02	3RH2911-2NF02
	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1LA11	_
5	cable entry from above	2NO	3RH2911-1LA20	_
5	2-pole auxiliary switch block,	1NO + 1NC	3RH2911-1MA11	
	cable entry from below	2NO	3RH2911-1MA20	
6	Surge suppressor, e.g. varistor (230 V AC)			
	Without LED	127 – 240 V AC	3RT2936-1BD00	3RT2936-1BD00
	With LED	127 – 240 V AC	3RT2936-1JL00	3RT2936-1JL00
7		nting on contactors and for connecting	g to the automation	level
10	Parallel connector, 3-pole	For main circuits	3RT1936-4BB31	-
		Connection from above	3RT2926-4RA11	-
11	Coil terminal module	Connection from below	3RT2926-4RB11	-
		Connection diagonally	3RT2926-4RC11	_
12	3-phase infeed terminal	_	3RV2935-5A	_
13	347 - 1	_	3RT1936-4BA31	_
14	Safety main circuit connector	For series switching of 2 contactors	3RA2936-1A	_
15 16	Wiring kit	For reversing combinations	3RA2933-2AA1	-
17	Mechanical interlock	-	3RA2934-2B	3RA2934-2B

Accessories for 3RT2 contactors (S3)

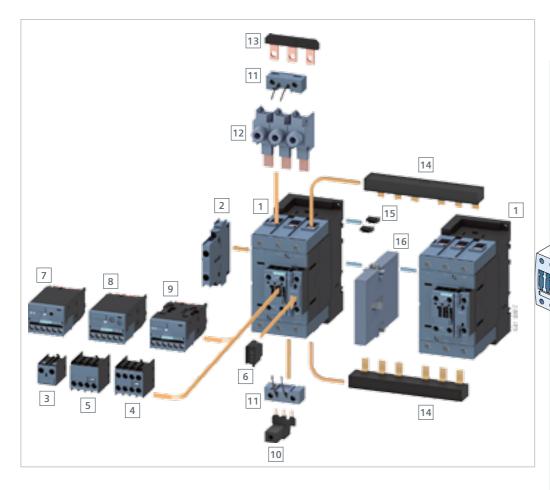


	Fitting of auxiliar streets on the front for	Version	Articly Number of Script Transport	Article No. spring-loaded terminals
1	3RT2 contacted o	Standard		
	Laterally (state)	2NO 🖁	3RH29 10420	3RH2921-2DA20
	switch bld	1NO - 1NC	3RH2921-1DA11	3RH2921-2DA11
2	SWITCH BIGG	2NC	38H2921-1DA02	3RH2921-2DA02
	Solid-state-compa switch block, laterally mountable	1NO 1N5		3RH2921-2DE11
	1_ம்பி அப்பிர் பிர்க்க	1NO 📢	3RH29 1-1AA10	_
3	d ry from a offe	1NC	3RH29 1-4-401	_
3	1-pole auxiliary switcի երck,	1NO 🖁	3RH29 1 B/ 10	_
	cable entry from below	1NC	3RH29 -1 -01	_
		1NC	3RH2911-1H/01	3RH2911-2HA01
1		2NC	3RH2911-1HA02	3RH2911-2HA02
√ √1	auxiliary switch	1NO + 1NC	3RH2911-1HA11	3RH2911-2HA11
	by Comments of the second	2NO + 2NC	3RH2911-1HA22	3RH2911-2HA22
		1NO	3RH2911-1HA10	3RH2911-2HA10
		2NO	3RH2911-1HA20	3RH2911-2HA20
00		1NO + 1NC	3RH2911-1NF11	3RH2911-2NF11
	switch block	2NO	3RH2911-1NF20	3RH2911-2NF20
	WITCH BIOCK	2NC	3RH2911-1NF02	3RH2911-2NF02
	2-pole auxiliary swom h block,	1NO + 1NC	3RH2911-1LA11	_
5	cable entry from above	2NO	3RH2911-1LA20	_
3	2-pole auxliary switch block,	1NO + 1NC	3RH2911-1MA11	_
	cable cable om above	2NO	3RH2911-1MA20	_
	Surge suppressor,			
6	e.g. varistor (230 V AC)			
	Without LED	127 – 240 V AC		3RT2936-1BD00
	With LED	127 – 240 V AC		3RT2936-1JL00
7	8 9 Function modules for mour to the automation level	nting on contacto	rs and for connectin	ig
10	Parallel connector, 3-pole	For main circuits	3RT1946-4BB31	-
		Connection from above	3RT2926-4RA11	-
11	Coil terminal module	Connection from below	3RT2926-4RB11	_
		Connection diagonally	3RT2926-4RC11	-
12	1-phase infeed terminal (3 units)		3RA2943-3L	-
13	Neutral bridge, 3-pole		3RT1946-4BA31	_
14 15	Wiring modules	For reversing combinations	3RA2943-2AA1	-
16	Mechanical interlock		3RA2934-2B	3RA2934-2B

Accessories for 3RT1 contactors (S6 – S12)

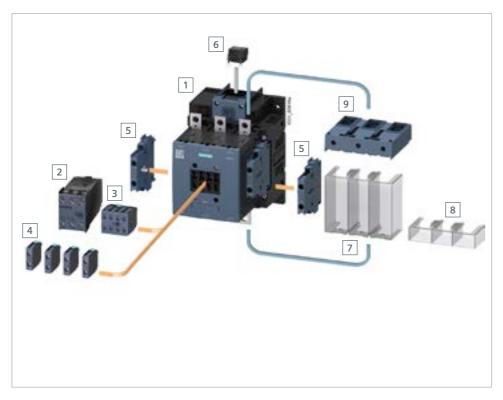

	Туре	Version	Article No.
1	3RT1 contactors	Standard	
	2-pole auxiliary switch block, lateral	1NO + 1NC	
2	– ON-delay, 200 – 240 V AC	0.5 10 s	3RT1926-2ED21
	– OFF-delay, 200 – 240 V AC	0.5 10 s	3RT1926-2FL21
3	4-pole auxiliary switch block (on front, screw terminals)	2NO + 2NC	3RH1921-1XA22-0MA0
4	1-pole auxiliary switch block	1NC	3RH1921-1CA01
4	(on front, screw terminals)	1NO	3RH1921-1CA10
	2-pole auxiliary switch block (on side, screw terminals)		
5	acc. to EN 50012	1NO + 1NC	3RH1921-1JA11
5	acc. to EN 50005	1NO + 1NC	3RH1921-1KA11
		2NC	3RH1921-1KA02
		2NO	3RH1921-1KA20
6	Surge suppressor (RC element), 127 240 V AC (screw terminals)	For S6 – S12	3RT1956-1CD00
7	Terminal cover for cable lug and busbar	For S6	3RT1956-4EA1
/	connections	For S10/S12	3RT1966-4EA1
0	Terminal cover for box terminals	For S6	3RT1956-4EA2
8	l Terminal cover for box terminals	For S10/S12	3RT1966-4EA2
	Terminal cover for box terminals		
	For round and ribbon cable conductors up to 70 mm ²	S6	3RT1955-4G
9	For round and ribbon cable conductors up to 120 mm ²	S6	3RT1956-4G
	For round and ribbon cable conductors up to 240 mm ²	S10/S12	3RT1966-4G

Operating mechanism types

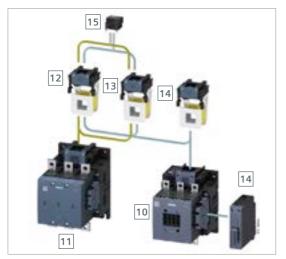

	3RT10 and 3RT14 air-break
10	contactor,
	sizes S6, S10 and S12
11	3RT12 vacuum contactor,
111	sizes S10 and S12
12	Withdrawable coils for contactors with
12	3RT1A conventional op. mech.
13	Withdrawable coils for contactors with
13	3RT1N electronic op. mech.
	Withdrawable coils and lateral
14	mounting module (snap-on) for
14	3RT1P contactors w. el. oper.
	mech. and remaining lifetime signal
15	RC element, 127 – 240 V AC

Size	Three-phase	Contactor without coil	Withdrawable coil for op. mech.	
	motor 400 V		Conventional	Electronic
			Control supply voltage	
			220 – 240 V AC/DC	200 – 277 V AC/DC
	kW	Article No.	Article No.	Article No.
	55	3RT1054-1LA06	3RT1955-5AP31	3RT1955-5NP31
S6	75	3RT1055-6LA06		
	90	3RT1056-6LA06		
	110	3RT1064-6LA06	3RT1965-5AP31	3RT1965-5NP31
S10	132	3RT1065-6LA06		
	160	3RT1066-6LA06		
S12	200	3RT1075-6LA06	3RT1975-5AP31	3RT1975-5NP31
312	250	3RT1076-6LA06		
		11	12	13



	Version	For size	Article No.	
	Terminal supports for stand-alone installation			
	Screw fastening and snap-on mounting onto TH 35 standard mounting rail	500	3RU2916-3A □ 01	
1	Screw fastening and snap-on mounting onto TH 35 standard mounting rail	S0	3RU2926-3A □ 01	
	Screw fastening and snap-on mounting onto TH 35 standard mounting rail	S2	3RU2936-3AA01	
	Screw fastening and snap-on mounting onto TH 35 standard mounting rail	S3	3RU2946-3AA01	
	Mechanical RESET comprising:			
4	24 – 30 V AC/DC	S00 – S3	3RU1900-2AB71	
4	110 – 127 V AC/DC	S00 – S3	3RU1900-2AF71	
	220 – 250 V AC/DC	S00 – S3	3RU1900-2AM71	
	Cable releases with holders for RESET for drill holes Ø 6.5 mm in the control panel			
	Length 400 mm	S00 – S3	3RU2900-1B	
5	Length 400 mm	S00 – S3	3RB3980-0B	
	Length 600 mm	S00 – S3	3RU2900-1C	
	Length 600 mm	S00 – S3	3RB3980-0C	
	Sealable cover for 3RB3, 3RU2, 3RR2, transparent			
	For covering the setting knobs	S00 – S3	3RV2908-0P	
6	For covering the setting knobs	S00 – S3	3RB3984-0	
	For covering the setting knobs	S00 – S3	3RR2940	
	Modules for electrical remote reset			
7	Resetting plungers, holders and formers	S00 – S3	3RU2900-1A	
	Resetting plungers, holders and formers	S00 – S3	3RB3980-0A	
	Push buttons with extended stroke (12 mm), IP65, Ø 22 mm	S00 – S3	3SU1200-0FB10-0AA0	
8	Extension plungers for compensation of the distance between a push button and the unlatching button of the relay	S00 – S3	3SU1900-0KG10-0AA0	







Can be combined with the following overload and current monitoring relays					
2 3RU2	3 3RB3	3RR2			
		•			
		-			

Screw terminals: A
Spring-loaded terminals: C

Accessories for 3RB20/21 electronic overload relays (S6 – S12)



		l		
	Version	For size	Article No.	
1	3RB20/21 electronic overload relays			
	Terminal covers for 3RB20/21			
	Cover for cable terminal lugs and busbar connections	S6	3RT1956-4EA1	
		S10/S12	3RT1966-4EA1	
2	Cover for hox terminals	S6	3RT1956-4EA2	
_	Cover for box terminals	S10/S12	3RT1966-4EA2	
	Cover for screw terminals between contactor and	S6	3RT1956-4EA3	
	overload relay without box terminal (1 unit required per combination)	S10/S12	3RT1966-4EA3	
	Box terminal block			
	For round and ribbon cable conductors up to 70 mm ²	S6	3RT1955-4G	
3	For round and ribbon cable conductors up to 120 mm ²	S6	3RT1956-4G	
	For round and ribbon cable conductors up to 240 mm ²	S10/S12	3RT1966-4G	
	Cable releases with holders for RESET and 3RB20/21			
4	for holes Ø 6.5 mm in the control panel, max. control panel thickness 8 mm			
4	Length 400 mm	S6 – S12	3RB3980-0B	
	Length 600 mm	30 - 312	3RB3980-0C	
5	Sealable cover for 3RB20/21, transparent			
Э	For covering the setting knobs	S6 – S12	3RB3984-0	
	Mechanical RESET and 3RB20/21 comprising:			
6	Resetting plungers, holders and formers	S6 – S12	3RB3980-0A	
	Push buttons with extended stroke (12 mm), IP65, Ø 22 mm	S6 – S12	3SU1200-0FB10-0AA0	
7	Extension plungers for compensation of the distance between a push button and the unlatching button of the relay	S6 – S12	3SU1900-0KG10-0AA0	

Subject to changes and errors. The information given in this document only contains general descriptions and/or performance features which may not always specifically reflect those described, or which may undergo modification in the course of further development of the products. The requested performance features are binding only when they are expressly agreed upon in the concluded contract.

All product designations may be trademarks or product names of Siemens AG or supplier companies whose use by third parties for their own purposes could violate the rights of the owners.

Article No.: DFCP-T10082-01-7600 Dispo 27601 WS 03185.0 Printed in Germany © Siemens AG 2017

Siemens AG Digital Factory Control Products P.O. Box 2355 90713 Fuerth Germany You can find more information with the QR code

